

TC 110

Electronic Drive Unit

Operating Instructions

Table of contents

1	About this manual	3
1.1	Validity	3
1.2	Conventions	3
2	Safety	5
2.1	Safety precautions	5
2.2	Proper use	6
2.3	Improper use	6
2.4	Functional safety	6
3	Product description	7
3.1	Product identification	7
3.2	Range of application	7
3.3	Function	8
3.4	General connection description	8
4	Connections diagram	9
5	Connection "X3"	10
5.1	Pin assignment	10
5.2	Operation via "X3" connection	10
6	The Pfeiffer Vacuum parameter set	14
6.1	General	14
6.2	Parameter overview	14
6.3	Configuring the connections	17
6.4	Operation with the Pfeiffer Vacuum parameter set	19
6.5	Switching on/off the pump	25
7	Pfeiffer Vacuum Protocol for "RS-485"	26
7.1	Telegram frame	26
7.2	Telegrams	26
7.3	Applied data types	27
8	Malfunctions	28
8.1	General	28
8.2	Operating mode display via LED	28
8.3	Error codes	28
	Declaration of conformity	30

1 About this manual

1.1 Validity

This operating manual is for customers of Pfeiffer Vacuum. It describes the functioning of the designated product and provides the most important information for safe use of the unit. The description follows applicable EU guidelines. All information provided in this operating manual refer to the current state of the product's development. The documentation remains valid as long as the customer does not make any changes to the product.

Up-to-date operating instructions can also be downloaded from www.pfeiffer-vacuum.com.

1.2 Conventions

Safety instructions

The safety instructions in Pfeiffer Vacuum operating instructions are the result of risk evaluations and hazard analyses and are oriented on international certification standards as specified by UL, CSA, ANSI Z-535, SEMI S1, ISO 3864 and DIN 4844. In this document, the following hazard levels and information are considered:

DANGER	
Imminent danger	Indicates an imminent hazardous situation that will result in death or serious injury.
WARNING	
Possibly imminent danger	Indicates an imminent hazardous situation that can result in death or serious injury.
CAUTION	
Possibly imminent danger	Indicates an imminent hazardous situation that can result in minor or moderate injury.
NOTICE	
Command or note	Command to perform an action or information about properties, the disregarding of which may result in damage to the product.

Pictograph definitions



Prohibition of an action or activity in connection with a source of danger, the disregarding of which may result in serious accidents



Warning of a displayed source of danger in connection with operation of the unit or equipment



Command to perform an action or task associated with a source of danger, the disregarding of which may result in serious accidents



Important information about the product or this document

Instructions in the text

→ Work instruction: here you have to do something.

Abbreviations used

DCU:	Display and control unit
HPU:	Handheld programming unit
TC:	Electronic drive unit for turbopump
TPS:	Mains pack
DI / DO:	Digital input / digital output
AI / AO:	Analog input / analog output
f:	Rotation speed (derived from frequency in Hz)
[P:000]:	Parameter of the electronic drive unit with number

2 Safety

2.1 Safety precautions



Duty to inform

Each person involved in the installation or operation of the unit must read and observe the safety-related parts of these operating instructions.

→ The operator is obligated to make operating personnel aware of dangers originating from the unit or the entire system.



WARNING

Danger of unsafe electrical installation

Safe operation after installation is the responsibility of the operator.

- Do not independently modify or change the pump and electrical equipment.
- Make sure that the system is integrated in an emergency off safety circuit.
- Consult Pfeiffer Vacuum for special requirements.



WARNING

Danger of electric shock

In case of defect, the parts connected to the mains supply are under voltage.

→ Always keep the mains connection freely accessible so you can disconnect it at any time.

- **Power supply:** The turbopump power supply must apply to the requirements of double insulation between mains input voltage and operating voltage according to the regulations of IEC 61010 and IEC 60950. Therefore Pfeiffer Vacuum recommends to use exclusively original-power packs and -accessories. Only in this case Pfeiffer Vacuum is able to guarantee the compliance of the European and North American guidelines.
- Observe all safety and accident prevention regulations.
- A safe connection to the protective earthing conductor (PE) is recommended (protection class III).
- Regularly check the proper observance of all safety measures.
- Before carrying out any work disconnect the unit and all associated installations safely from the mains.
- Do not loosen any plug connection during operations.
- The unit has been accredited with protection class IP 30. Take necessary measures when installing into ambient conditions, which afford other protection classes.
- Keep leads and cables well away from hot surfaces ($> 70\text{ °C}$).
- Only separate the pump and the electronic drive unit from each other after disconnecting the supply voltage and the complete standstill of the pump.

2.2 Proper use



NOTICE

CE conformity

The manufacturer's declaration of conformity becomes invalid if the operator modifies the original product or installs additional components.

→ Following installation into a plant and before commissioning, the operator must check the entire system for compliance with the valid EU directives and reassess it accordingly.

- The electronic drive unit TC 110 operates designated Pfeiffer Vacuum turbopumps and their accessories.

2.3 Improper use

Improper use will cause all claims for liability and warranties to be forfeited. Improper use is defined as usage for purposes deviating from those mentioned above, especially:

- use of accessories or spare parts, which are not named in this manual
- operation of the devices in areas with ionizing radiation

warranty seal

PFEIFFER VACUUM

Closure seal

The product is sealed at the factory. Damaging or removal of a closure seal leads to the loss of liability and warranty entitlements.

→ Do not open the product within its warranty period!

→ For process-related shorter maintenance intervals please contact the Pfeiffer Vacuum Service.

2.4 Functional safety

The drive unit (electronic drive unit) TC 110 performs the safety function "Safe Limited Speed" according to EN 61800-5-2. In case of excess rotation speed the commutation of the pump motor is switched off and the drive transferred into the safe condition.

Summary of characteristic data for use in safety-relevant applications:

Characteristics according to IEC 61508 and IEC 62061

Characteristic	Safety Integrity Level	PFH	PFD _{av}	Proof Test Interval T
Value	SIL CL 2	$4.2 \cdot 10^{-9} / \text{h}$	$3.7 \cdot 10^{-4}$	20 a

Characteristics according to EN ISO 13849-1

Characteristic	Performance Level	Category	MTTF _d	Average Diagnostic Coverage DC
Value	PL d	Cat. 3	high (134 a)	medium (90 % - <99 %)

- During the expected device life span of up to 20 years no proof test is required.
- If the user calculates his safety application with the specified values for 20 years, the safety control system must be taken out of operation after 20 years and returned to the manufacturer. A proof test cannot be accomplished by the user.

3 Product description

3.1 Product identification



This product has been tested to the requirements of CAN/CSA-C22.2 No. 61010-1, second edition, including Amendment 1, or a later version of the same standard incorporating the same level of testing requirements.

For information about other certifications, if applicable, please see the signet on the product or:

- www.tuvdotcom.com
- TUVdotCOM-ID 0000021320

Product features

The electronic drive unit TC 110 is an integrated component of the turbopump. Its purpose is to drive, monitor and control the entire pump.

Characteristics	TC 110
Connection voltage TC	24 V DC \pm 5 %
Connection panel	Standard (X3)
Turbopump HiPace	10, 60, 80, 300

To correctly identify the product when communicating with Pfeiffer Vacuum, always have the information from the rating plate available.

3.2 Range of application

Pfeiffer Vacuum electronic drive units TC 110 must be installed and operated in the following ambient conditions.

Installation location	weather protected (indoors)
Protection category	IP 30
Protection class	III
Temperature	+5 °C to +40 °C (up to +35 °C with air cooling)
Relative humidity	max. 80 %, at $T \leq 31$ °C, up to max. 50% at $T \leq 40$ °C
Atmospheric pressure	75 kPa - 106 kPa
Installation altitude	2000 m max.
Degree of pollution	2
Overvoltage category	II

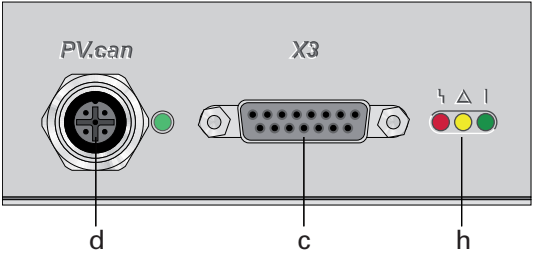





Fig. 1: Standard panel for the TC 110

c Connection "X3"

d Service connection "*PV.can*"

h LED "Operating display"

	<p>PV.can¹ M12 casing socket with screw coupling and LED for Pfeiffer Vacuum Service purposes.</p>
	<p>X3 D-sub 15 pole female socket for the connection of a remote control.</p>
	<p>Casing socket on the rear side of the electronic drive unit for the connection to the turbopump.</p>

1. The connection "PV.can" serves to service purposes exclusively.

4 Connections diagram


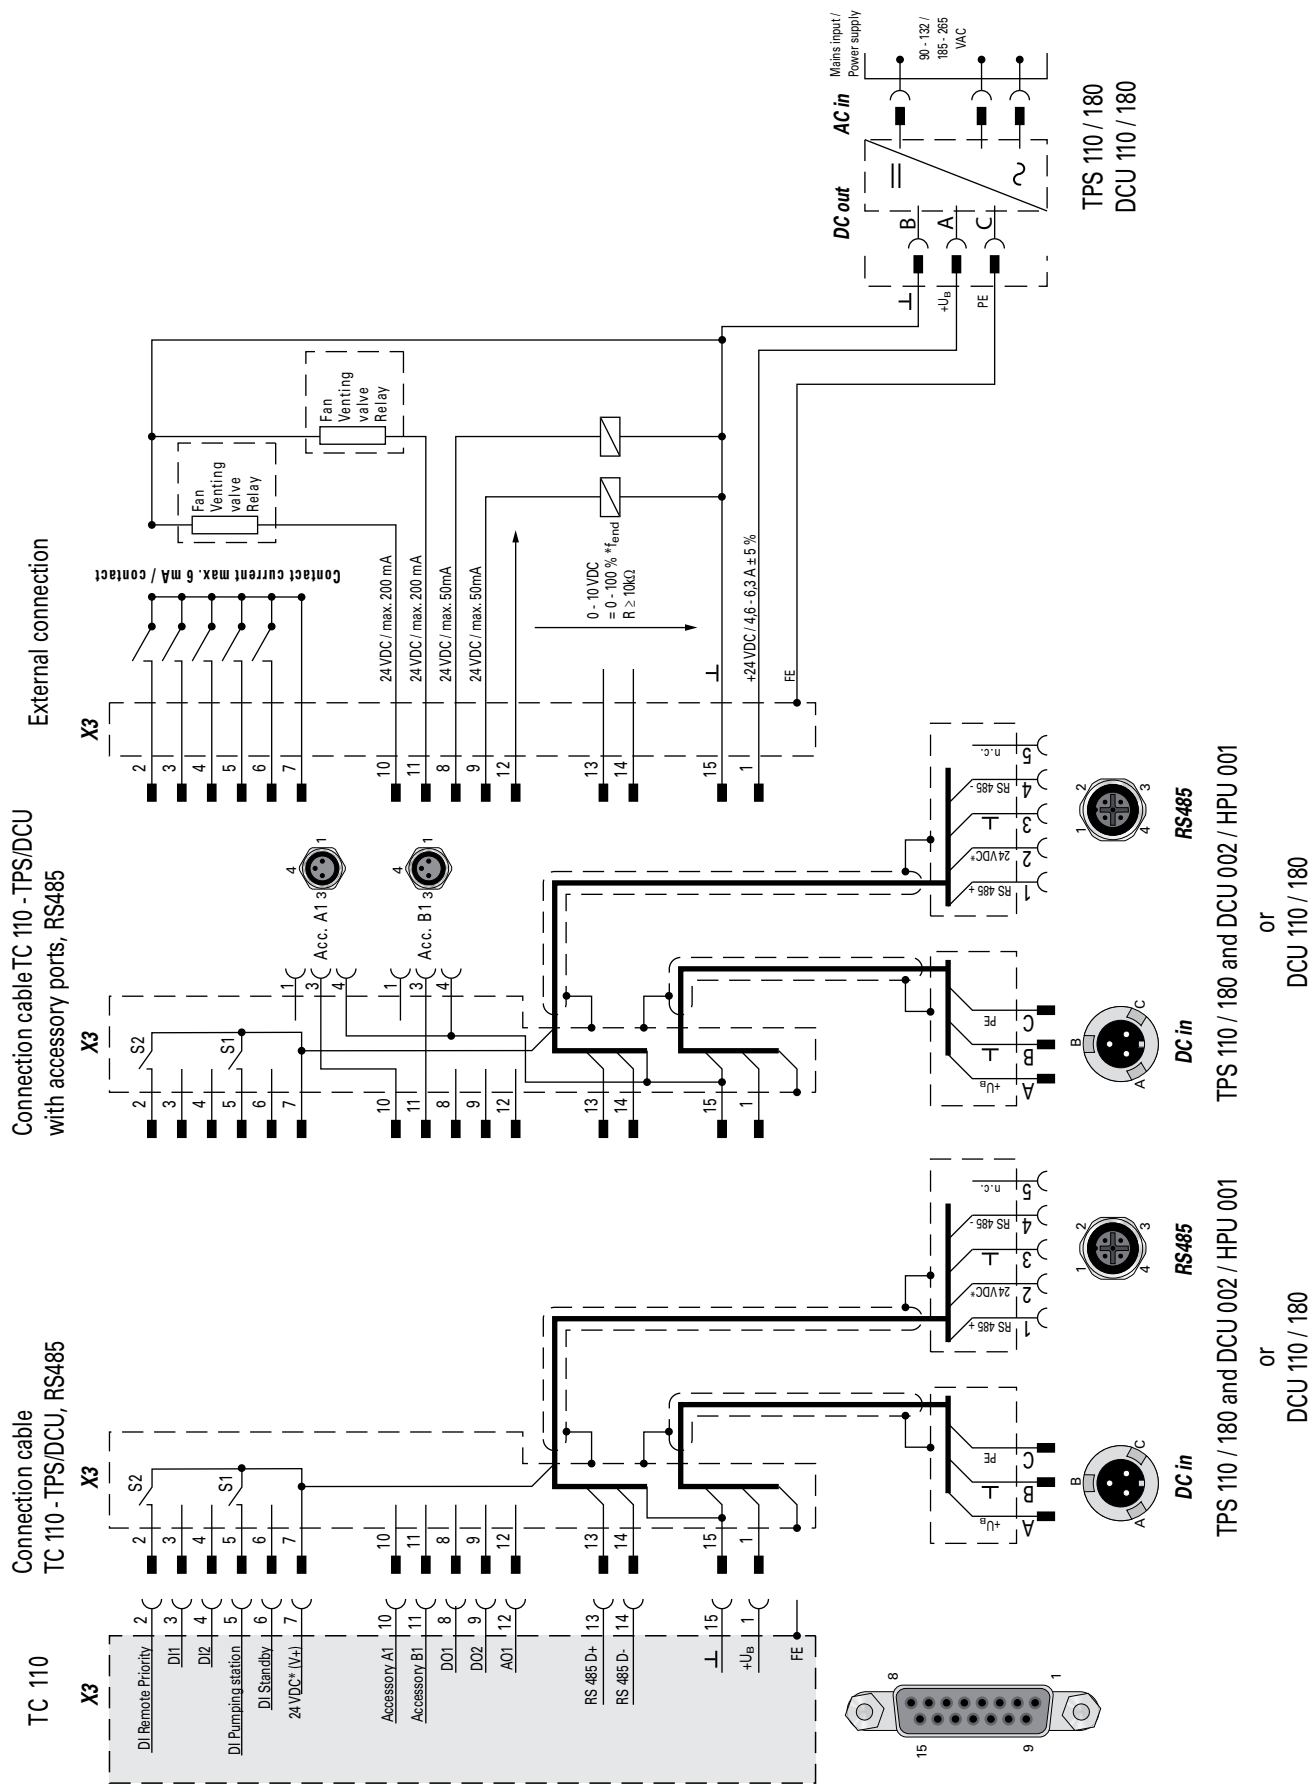


Fig. 2: Connections diagram and assignment of the TC 110

5 Connection "X3"



Remote control options and voltage supply are provided via the 15-pole D-sub connector with the designation "X3" on the TC 110.

→ Shielded connectors and cables must be used.



NOTICE

Danger of the drive unit being destroyed

Cutting the plug connection "X3" can lead to the destruction of the electronic drive unit, when the power supply is still switched on.

- Before pulling the connector "X3" necessarily disconnect the power supply.
- Switch off the power supply unit.

The following information display the factory setting. Configuration is possible using the Pfeiffer Vacuum parameter set.

5.1 Pin assignment

Pin	Function	Designation factory settings
1	+24 VDC input	Voltage supply for the electronic drive unit
2	DI Remote priority	Control via interface "X3"; open: off; V+: set and priority over other digital inputs
3	DI1	Enable venting; open: off; V+: on
4	DI2	Heating; open: off; V+: on
5	DI Pumping station	open: off; V+: on and error acknowledgement
6	DI Standby DI Error acknowledgement	Standby rotation speed; open: off; V+: on Error acknowledgement: V+ pulse (500 - 2000 ms)
7	+24 VDC* output (V+)	Reference voltage for all digital inputs
8	DO1	GND: no; V+: yes ($I_{\max} = 50 \text{ mA}/24 \text{ V}$)
9	DO2	GND: no; V+: yes ($I_{\max} = 50 \text{ mA}/24 \text{ V}$)
10	Accessory output A1	open: off; V+: on
11	Accessory output B1	open: off; V+: on
12	AO1	Actual rotation speed; 0-10 VDC is equivalent to 0-100%; $R_L > 10 \text{ k}\Omega$
13	RS-485	D+
14	RS-485	D-
15	Ground (GND)	Ground connection for the electronic drive unit; Reference ground for all digital inputs and all outputs

5.2 Operation via "X3" connection

Voltage supply

+24 V DC Input / Pin 1

The electrical connection at "X3" is carried out via connecting cables of the Pfeiffer Vacuum accessories program or by customized configuration on Pin 1 and Pin 15.

+24 V DC* Output / Pin 7

Inputs 2 - 6 are activated by connecting them with +24 VDC to Pin 7 (active high). They can also be activated via an external PLC. The functions are deactivated by "PLC high level" and by "PLC low level".

- PLC high level: +13 V to +33 V
- PLC low level: -33 V to +7 V
- R_i : 7 k Ω

Inputs

The digital inputs at connection "X3" are used to connect various functions of the electronic drive unit. Functions are assigned to the inputs DI1 - DI2 ex factory. These can be configured via interface RS-485 and the Pfeiffer Vacuum parameter set.

DI Remote priority / Pin 2

V+ : The connection "X3" has operation priority over all other digital inputs.

open: Remote priority inactive

DI1 (Enable venting) / Pin 3

V+ : Venting is enabled (venting according to venting mode)

open: Venting locked (no venting is performed)

DI2 (Heating) / Pin 4

V+ : Heating on

open: Heating off

DI Pumping station / Pin 5

The turbopumps is placed in operation and connected pumping station components (e.g. backing pump, venting valve, air cooling unit) are triggered. Any ongoing error messages are reset when their cause has been eliminated.

V+ : Malfunction acknowledgement and pumping station on

open: Pumping station off

DI Standby - Error acknowledgement / Pin 6

In standby mode, the turbopump operates at a specified rotor speed < nominal rotation speed. Factory setting and recommended operation are 66.7 % of the nominal rotation speed.

V+ : Standby activated

V+ : Reset ongoing error messages when cause has been eliminated with a pulse of 500 - 2000 ms duration

open: Standby off, operation at nominal rotation speed

Outputs

The digital outputs at the connection "X3" can be loaded with a maximum of 24 V / 50 mA per output. All outputs listed below are configurable by the Pfeiffer Vacuum parameter set via interface RS-485 (description related to factory settings).

DO1 (Rotation speed switch point attained) / Pin 8

Active high after the rotation speed switch point is attained. Rotation speed switch point 1 is factory-set to 80% of the nominal rotation speed. It can, for example, be used for a "pump operational" message.

DO2 (No errors) / Pin 9

When the supply voltage has been established, digital output DO2 permanently outputs 24 V DC which means "no errors". Active low in case of error (collective error message).

Accessory outputs / Pin 10 and Pin 11

The accessory outputs can be loaded with a maximum of 24 V / 200 mA per output. Additional functions can be assigned to the accessory inputs and outputs via DCU, HPU or PC. Works settings:

- Accessory output A1: A connected air cooling unit is activated.
- Accessory output B1: A connected venting valve is activated, if venting release is transmitted via input DI1.

AO1 Analog output 0-10 V DC / Pin 12

A rotation-speed-proportional voltage (0-10 V DC equals 0 - 100 % x f_{Nominal}) can be picked up via the analog output (load $R \geq 10 \text{ k}\Omega$). Additional functions (optionally current/power) can be assigned to the analog output via DCU, HPU or PC.

RS-485

One Pfeiffer Vacuum display and control panel (DCU or HPU) or an external PC can be connected respectively to the electronic drive unit via Pin 13 and Pin 14 of the connection "X3" on the electronic drive unit.



CAUTION

Danger of electric shock

The insulation measures of the bus system are designed only for use with safety extra-low voltage.

→ Connect only suitable devices to the bus system.

- The group address of the electronic drive unit is 961.
- All units connected to the bus must have differing RS-485 device addresses [P:797].

Designation	Value
Serial interface	RS-485
Baud rate	9600 bauds
Data word length	8 bits
Parity	none (no parity)
Start bits	1
Stop bits	1..2

Connecting Pfeiffer Vacuum display and control units or PC

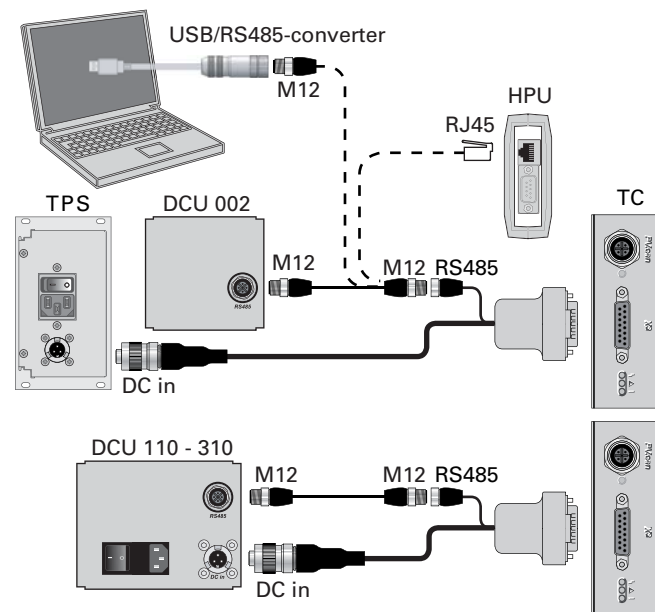


Fig. 3: Optional connection possibilities for interface RS485

- Use the connection cable supplied with the control panel or from the range of accessories.
- The connection of respectively one external operating unit is possible on the interface RS-485.
- A USB interface (PC) can be connected via the USB/RS-485-converter.

Cross-linking via the connection RS-485

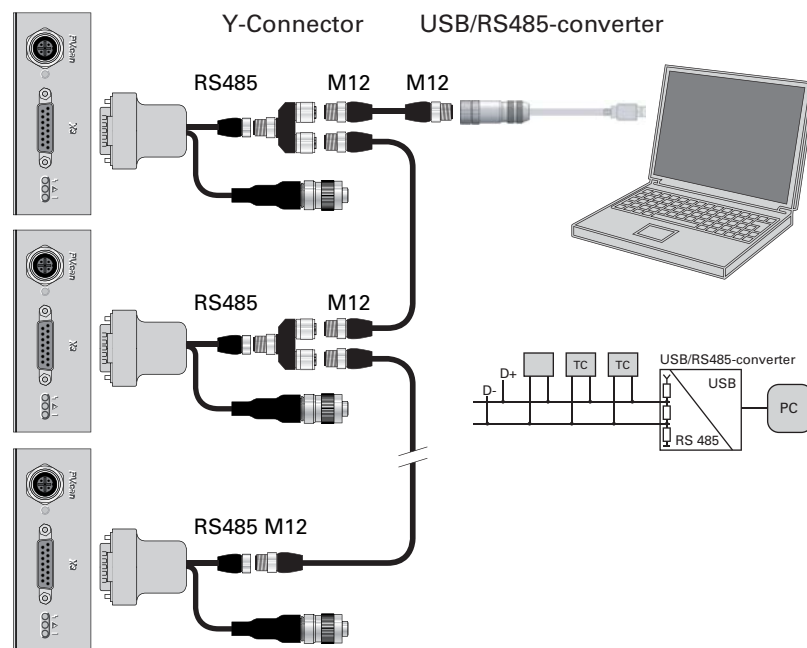


Fig. 4: Cross-linking via connection RS485 with connection cables and accessory

- ➔ Establish the connections according to the specification of the interface RS-485.
- ➔ Connect all units with RS-485 D+ and RS-485 D- to the bus.
- The group address of the electronic drive unit is 961.
- All units connected to the bus must have differing RS-485 device addresses [**P:797**].

6 The Pfeiffer Vacuum parameter set

6.1 General

All function-relevant variables of a turbopump are anchored in the electronic drive unit as parameters. Each parameter has a three-digit number and a designation. Parameters can be used via Pfeiffer Vacuum display and control units or via RS-485 with the Pfeiffer Vacuum protocol.



Additional parameters in the control unit

For the control of connected external components (e.g. vacuum measurement devices) there are additional parameters fixed in the respective Pfeiffer Vacuum display and control unit.

→ Please consider the respective operating instructions.

Conventions

Parameters are displayed in square brackets as a three-digit number in bold font. The designation may also be stated if necessary.

Example: **[P:312]** Software version

6.2 Parameter overview

Annotation

#	Three figure number of the parameter
Display	Notification of the parameter in a Pfeiffer Vacuum display and control unit
Designation	Short description of the parameter
Functions	Functional description of the parameter
Data type	Type of formatting of the parameter for the use within the Pfeiffer Vacuum protocol
Access method	R: read access; W: write access
Unit	Physical unit of the described characteristic
min / max	permissible limits for value input
default	factory settings (partially specific of the pump type)
	Parameter can be stored non volatile in the electronic drive unit and may be re-used after resetting of the mains supply.

Operation with DCU



Parameter set and Pfeiffer Vacuum display and control unit

Pfeiffer Vacuum display and control units DCU show the basic parameter set by default. Furthermore the DCU contains parameters, which are not positioned in the electronic drive unit.

→ Parameter **[P:794]** = 1 (Display of all available parameters).

#	Display	Designation	Functions	Data type	Access	Unit	min	max	default	
340	Pressure	Active pressure value		7	R	mbar	1E-10	1E3		
350	Ctr Name	Type of display and control unit		4	R					
351	Ctr Software	Software of display and control unit		4	R					
738	Gaugetype	Type of pressure gauge		4	RW					
794	Param set	Parameterset	0 = basic parameter set 1 = extended parameter set	7	RW		0	1	0	
795	Servicelin	Insert service line		7	RW				795	

Control commands

#	Display	Designation	Functions	Data type	Access	Unit	min	max	default	
001	Heating	Heating	0 = off 1 = on	0	RW		0	1	0	x
002	Standby	Standby	0 = off 1 = on	0	RW		0	1	0	x
004	RUTimeCtrl	Run-up time control	0 = off 1 = on	0	RW		0	1	1	x
009	ErrorAckn	Error acknowledgement	1 = Error acknowledgement	0	W		1	1		
010	PumpgStatn	Pumping station	0 = off 1 = on and error acknowledgement	0	RW		0	1	0	x
012	EnableVent	Enable venting	0 = no 1 = yes	0	RW		0	1	0	x
017	CfgSpdSwPt	Configuration rotation speed switch point	0 = Rotation speed switch point 1 1 = Rotation speed switch point 1&2	7	RW		0	1	0	x
019	Cfg DO2	Configuration output DO2	0 = Rot. speed switch point attained 1 = No error 2 = Error 3 = Warning 4 = Error and/or warning 5 = Set speed attained 6 = Pump on 7 = Pump accelerates 8 = Pump decelerates 9 = always 0 10 = always 1 11 = Remote priority active 12 = Heating 13 = Backing pump 14 = Sealing gas 15 = Pumping station 16 = Pump rotates 17 = Pump does not rotate	7	RW		0	17	1	x
023	MotorPump	Motor pump	0 = off 1 = on	0	RW		0	1	1	x
024	Cfg DO1	Configuration output DO1	0 = Rot. speed switch point attained 1 = No error 2 = Error 3 = Warning 4 = Error and/or warning 5 = Set speed attained 6 = Pump on 7 = Pump accelerates 8 = Pump decelerates 9 = always 0 10 = always 1 11 = Remote priority active 12 = Heating 13 = Backing pump 14 = Sealing gas 15 = Pumping station 16 = Pump rotates 17 = Pump does not rotate	7	RW		0	17	0	x
025	OpMode BKP	Operation mode backing pump	0 = Continuous operating 1 = Intermittent mode 2 = Delayed switch-on	7	RW		0	2	0	x
026	SpdSetMode	Rotation speed setting mode	0 = off 1 = on	7	RW		0	1	0	x
027	GasMode	Gas mode	0 = Heavy gases 1 = Light gases 2 = Helium	7	RW		0	2	0	x
030	VentMode	Venting mode	0 = Delayed venting 1 = No venting 2 = Direct venting	7	RW		0	2	0	x
035	Cfg Acc A1	Configuration accessory connection A1	0 = Fan (continuous operation) 1 = Venting valve, normally closed 2 = Heating 3 = Backing pump 4 = Fan (temperature controlled) 5 = Sealing gas 6 = always 0 7 = always 1 8 = Power failure venting unit	7	RW		0	8	0	x

#	Display	Designation	Functions	Data type	Access	Unit	min	max	default	
036	Cfg Acc B1	Configuration accessory connection B1	0 = Fan (continuous operation) 1 = Venting valve, normally closed 2 = Heating 3 = Backing pump 4 = Fan (temperature controlled) 5 = Sealing gas 6 = always 0 7 = always 1 8 = Power failure venting unit	7	RW		0	8	1	x
037	Cfg Acc A2	Configuration accessory connection A2	0 = Fan (continuous operation) 1 = Venting valve, normally closed 2 = Heating 3 = Backing pump 4 = Fan (temperature controlled) 5 = Sealing gas 6 = always 0 7 = always 1 8 = Power failure venting unit	7	RW		0	8	3	x
038	Cfg Acc B2	Configuration accessory connection B2	0 = Fan (continuous operation) 1 = Venting valve, normally closed 2 = Heating 3 = Backing pump 4 = Fan (temperature controlled) 5 = Sealing gas 6 = always 0 7 = always 1 8 = Power failure venting unit	7	RW		0	8	2	x
050	SealingGas	Sealing gas	0 = off 1 = on	0	RW		0	1	0	x
055	Cfg AO1	Configuration output AO1	0 = Actual rotation speed 1 = Power 2 = Current 3 = always 0 V 4 = always 10 V	7	RW		0	4	0	x
060	CtrlVialnt	Control via interface	1 = Remote 2 = RS-485 4 = PV.can 8 = Field bus 16 = E74 255 = Unlock interface selection	7	RW		1	255	1	x
061	IntSelLckd	Interface selection locked	0 = off 1 = on	0	RW		0	1	0	x
062	Cfg DI1	Configuration input DI1	0 = Deactivated 1 = Enable venting 2 = Heating 3 = Sealing gas 4 = Run-up time control 5 = Rotation speed setting mode 6 = Motor Setting ≠ [P:063]	7	RW		0	6	1	x
063	Cfg DI2	Configuration input DI2	0 = Deactivated 1 = Enable venting 2 = Heating 3 = Sealing gas 4 = Run-up time control 5 = Rotation speed setting mode 6 = Motor Setting ≠ [P:062]	7	RW		0	6	2	x

Status requests

#	Display	Designation	Functions	Data type	Access	Unit	min	max	default	
300	RemotePrio	Remote priority	0 = no 1 = yes	0	R		0	1		
302	SpdSwPtAtt	Rotation speed switch point attained	0 = no 1 = yes	0	R		0	1		
303	Error code	Error code		4	R					
304	OvTempElec	Excess temperature electronic drive unit	0 = no 1 = yes	0	R		0	1		
305	OvTempPump	Excess temperature pump	0 = no 1 = yes	0	R		0	1		
306	SetSpdAtt	Set rotation speed attained	0 = no 1 = yes	0	R		0	1		

#	Display	Designation	Functions	Data type	Access	Unit	min	max	default	
307	PumpAccel	Pump accelerates	0 = no 1 = yes	0	R		0	1		
308	SetRotSpd	Set rotation speed (Hz)		1	R	Hz	0	999999		
309	ActualSpd	Active rotation speed (Hz)		1	R	Hz	0	999999		
310	DrvCurrent	Drive current		2	R	A	0	9999.99		
311	OpHrsPump	Operating hours pump		1	R	h	0	65535		x
312	Fw version	Firmware version electronic drive unit		4	R					
313	DrvVoltage	Drive voltage		2	R	V	0	9999.99		
314	OpHrsElec	Operating hours electronic drive unit		1	R	h	0	65535		x
315	Nominal Spd	Nominal rotation speed (Hz)		1	R	Hz	0	999999		
316	DrvPower	Drive power		1	R	W	0	999999		
319	PumpCycles	Pump cycles		1	R		0	65535		x
326	TempElec	Temperature electronic		1	R	°C	0	999999		
330	TempPmpBot	Temperature pump bottom part		1	R	°C	0	999999		
336	AccelDecel	Acceleration / Deceleration		1	R	rpm/s	0	999999		
342	TempBearng	Temperature bearing		1	R	°C	0	999999		
346	TempMotor	Temperature motor		1	R	°C	0	999999		
349	ElecName	Name of electronic drive unit		4	R					
354	HW Version	Hardware version electronic drive unit		4	R					
360	ErrHist1	Error code history, pos. 1		4	R					x
361	ErrHist2	Error code history, pos. 2		4	R					x
362	ErrHist3	Error code history, pos. 3		4	R					x
363	ErrHist4	Error code history, pos. 4		4	R					x
364	ErrHist5	Error code history, pos. 5		4	R					x
365	ErrHist6	Error code history, pos. 6		4	R					x
366	ErrHist7	Error code history, pos. 7		4	R					x
367	ErrHist8	Error code history, pos. 8		4	R					x
368	ErrHist9	Error code history, pos. 9		4	R					x
369	ErrHist10	Error code history, pos. 10		4	R					x
397	SetRotSpd	Set rotation speed (rpm)		1	R	rpm	0	999999		
398	ActualSpd	Actual rotation speed (rpm)		1	R	rpm	0	999999		
399	NominalSpd	Nominal rotation speed (rpm)		1	R	rpm	0	999999		

Set value settings

#	Display	Designation	Functions	Data type	Access method	Unit	min	max	default	
700	RUTimeSVal	Set value run-up time		1	RW	min	1	120	8	x
701	SpdSwPt1	Rotation speed switch point 1		1	RW	%	50	97	80	x
707	SpdSVal	Set value in rot. speed setting mode		2	RW	%	20	100	65	x
708	PwrSVal	Set value power consumption		7	RW	%	10	100	100 ¹	x
710	Swoff BKP	Switching off threshold backing pump in intermit-tend mode		1	RW	W	0	1000	0	x
711	SwOn BKP	Switching on threshold backing pump in intermit-tend mode		1	RW	W	0	1000	0	x
717	StdbysVal	Set value rotation speed at standby		2	RW	%	20	100	66.7	x
719	SpdSwPt2	Rotation speed switch point 2		1	RW	%	5	97	20	x
720	VentSpd	Venting rot. speed at delayed venting		7	RW	%	40	98	50	x
721	VentTime	Venting time at delayed venting		1	RW	s	6	3600	3600	x
777	NomSpdConf	Nominal rotation speed confirmation		1	RW	Hz	0	1500	0	x
797	RS485Adr	RS-485 device address		1	RW		1	255	1	x

1. depending on the pump type

6.3 Configuring the connections

The electronic drive unit is pre-configured in the factory. Thereby the turbopump is immediately operational with the necessary functions. The connections of the electronic drive unit can be configured to suit individual requirements using the parameter set.

Digital outputs on "X3"

→ Configuration via parameters [P:019] and [P:024].

Option	Description
0 = Rotation speed switchpoint attained	active, if switchpoint attained
1 = No error	active, if failure-free operation
2 = Error	active, if error message is active
3 = Warning	active, if warning message is active
4 = Error and / or warning	active, if error and / or warning is active
5 = Set rotation speed attained	active, if set rotation speed is attained
6 = Pump on	active, if Pumping station and Motor is on; No Error
7 = Pump accelerates	active, if Pumping station is on; Actual rotation speed < Set rotation speed
8 = Pump decelerates	active, if Pumping station is on; Actual rotation speed > Set rotation speed Pumping station is off; Rotation speed > 3 Hz
9 = always 0	GND for the control of an external device
10 = always 1	+24 V DC for the control of an external device
11 = Remote priority active	active, if Remote priority is active
12 = Heating	Control is equal to parameter [P:001]
13 = Backing pump	Control is equal to parameter [P:010] and [P:025]
14 = Sealing gas	Control is equal to parameter [P:050]
15 = Pumping station	Control is equal to parameter [P:010]
16 = Pump rotates	active, if rotation speed > 1 Hz
17 = Pump does not rotate	active, if rotation speed < 2 Hz

Analog output on "X3"

→ Configuration via parameter [P:055].

Option	Description
0 = Rotation speed	Rotation speed signal; $0 - 10 \text{ VDC} = 0 - 100 \% \times f_{\text{Nominal}}$
1 = Power	Power signal; $0 - 10 \text{ VDC} = 0 - 100 \% \times P_{\text{max}}$
2 = Current	Current signal; $0 - 10 \text{ VDC} = 0 - 100 \% \times I_{\text{max}}$
3 = always 0 V	always GND
4 = always 10 V	output of continuously 10 V DC

Accessory connection

→ Configuration via parameters [P:035] or [P:036].

The standard version electronic drive unit TC 110 only can control two accessory ports via connection cable. Therefore the parameters [P:037] and [P:038] are ineffective.

Option	Description
0 = Fan (continuous operation)	Control via parameter Pumping station
1 = Venting valve, normally closed	Control via parameter Enable venting, when using a venting valve which is normally closed.
2 = Heating	Control via parameters Heating and Rotation speed switchpoint attained
3 = Backing pump	Control via parameters Pumping station and operation mode backing pump
4 = Fan (temperature controlled)	Control via parameter Pumping station and temperature thresholds
5 = Sealing gas	Control via parameters Pumping station and Sealing gas
6 = always 0	GND for the control of an external device
7 = always 1	+24 V DC for the control of an external device
8 = Power failure venting unit	Control via parameter Enable venting, when using a power failure venting unit.

Control via interface→ Configuration via parameters **[P:060]** and **[P:061]**.

Option [P:060]	Description
1 = remote	Operation via connection "remote"
2 = RS-485	Operation via connection "RS-485"
4 = PV.can	For service purposes only
8 = Field bus	Operation via field bus
16 = E74	Operation via connection "E74"
Option [P:061]	Description
0 = off	Interface selection via [P:060]
1 = on	Interface selection locked

Digital inputs on "X3"→ Configuration via parameters **[P:062]** and **[P:063]**.

Option	Description
0 = deaktiviert	Connection deactivated
1 = Enable venting	Control is equal to parameter [P:012]
2 = Heating	Control is equal to parameter [P:001]
3 = Sealing gas	Control is equal to parameter [P:050]
4 = Run-up time control	Control is equal to parameter [P:004]
5 = Rotation speed setting mode	Control is equal to parameter [P:026]
6 = Motor	Control is equal to parameter [P:023]

6.4 Operation with the Pfeiffer Vacuum parameter set**Factory settings**

The electronic drive unit is pre-programmed in the factory. This guarantees proper, reliable turbopump operation without the need for additional configuration.

Checking the adjustments

→ Before operating with parameters, check set values and control commands for their suitability for the pumping process.

Gas type dependent operations

Friction causes the rotor to heat up severely under gas load and high rotation speed. To avoid overheating, the electronic drive unit has implemented power-rotation speed-characteristics, whereby the pump can be operated at every rotation speed with the maximum allowable gas load without danger of damage. The maximum power consumption depends on the gas type. Three characteristics are available in order to completely exhaust the pump's capacity for each gas type.

**NOTICE****Danger of the pump being destroyed**

Pumping of gases with a higher molecular mass in the wrong gas mode can lead to destruction of the pump.

→ Ensure the gas mode is correctly set.

→ Contact Pfeiffer Vacuum before using gases with a greater molecular mass (> 80).

- Gas mode "0" for gases with the molecular mass >39, e.g. Ar.
- Gas mode "1" for gases with the molecular mass ≤ 39.
- Gas mode "2" for helium.
- Power characteristics according to the technical data of the turbopump.

→ Check and set-up the gas mode via **[P:027]**.

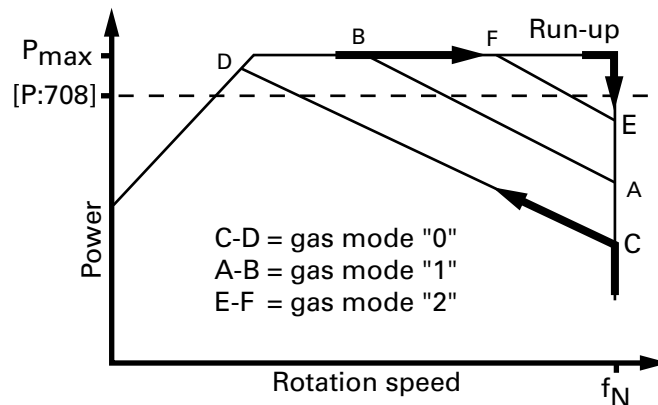


Fig. 5: Principle of power characteristics lines for gas type dependent operations, e.g. gas mode = 0

The turbopump runs up with maximum power consumption. When the nominal and/or set rotation speed is reached, the pump automatically switches over to the chosen power characteristic of the selected gas mode. Increasing gas load is initially compensated by a rise in power consumption in order to keep the rotation speed constant. Increasing gas friction, however, causes the turbopump to heat up more severely. When the gastype-dependent maximum power is exceeded, the rotation speed of the turbopump is reduced until an equilibrium between permissible power and gas friction is attained.

→ To avoid rotation speed fluctuations, Pfeiffer Vacuum recommends setting a somewhat lower frequency in rotation speed setting mode.

Set value power consumption

→ Adjust the parameter **[P:708]** to the desired value in %.

If adjusting the set value power consumption below 100 % the run-up time prolongs. To avoid error messages, the parameter **[P:700] RUTimeSVal** should be adjusted accordingly.

Run-up time

The run-up of the turbopump is time-monitored ex factory. There are various causes of prolonged run-up times, e.g.:

- Too high gas loads
- Leakage in the system
- The set value run-up time is too low

→ Eliminate any external and application-related causes.

→ Adjust the run-up time via parameter **[P:700]**.

Adjusting the rotation speed switchpoint

The rotation speed switch point can be used for the message "Pump operational for the process". Overrunning or underrunning the active rotation speed switch point activates or deactivates a signal at the pre-configured output on the electronic drive unit and at the status parameter **[P:302]**.

Rotation speed switchpoint 1

→ Adjust the parameter **[P:701]** to the desired value in %.

→ Parameter **[P:017] = 0**

Signal output and status parameter **[P:302]** are based on the set value for rotation speed switch point 1 **[P:701]**.

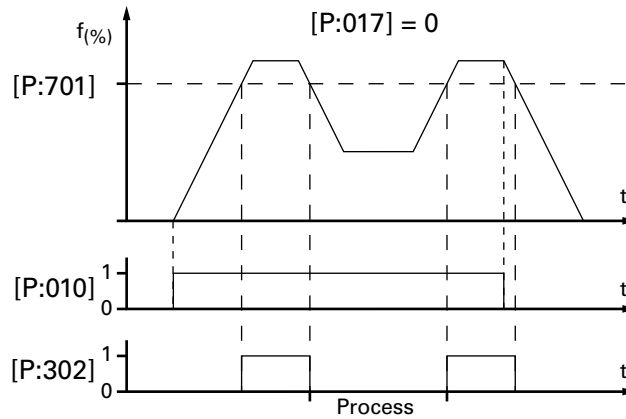


Fig. 6: Example for the configuration rotation speed switch point 1 active

Rotation speed switchpoint 1 & 2

- Adjust the parameter **[P:701]** to the desired value in %.
- Adjust the parameter **[P:719]** to the desired value in %.
- Parameter **[P:017] = 1**

When the pumping station **[P:010]** is switched on, the rotation speed switch point 1 is the signal generator. When the pumping station is switched off, signal output and status query are based on the rotation speed switch point 2. The signal output is governed by the hysteresis between the two switch points.

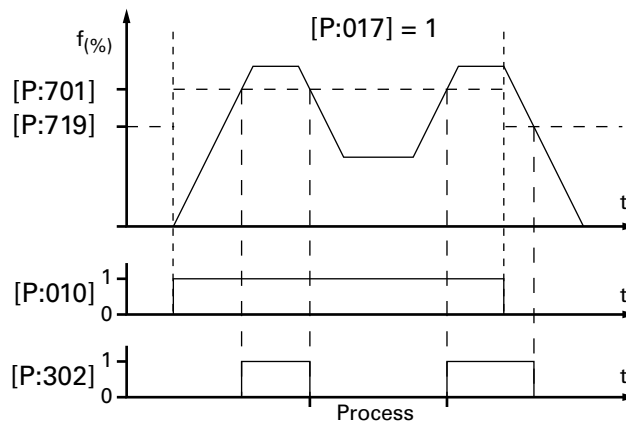


Fig. 7: Example for the configuration rotation speed switch point 1+2 active; $[P:701] > [P:719]$

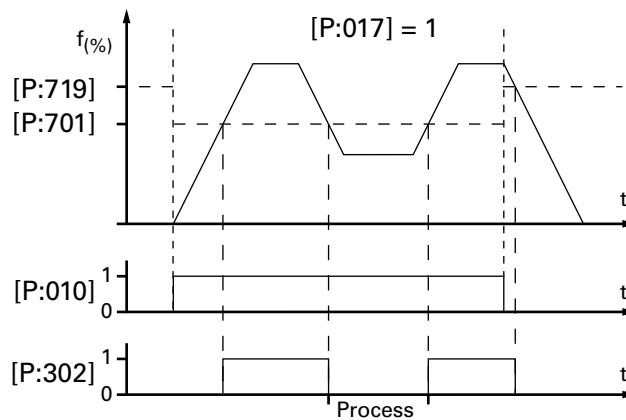


Fig. 8: Example for the configuration rotation speed switch points 1+2 active; $[P:701] < [P:719]$

Rotation speed setting mode

The rotation speed setting mode reduces the rotation speed and hence the throughput of the turbopump. The pumping speed of the turbopump changes proportional to rotation speed. Standby mode is ineffective during rotation speed setting mode. The set rotation speed is adjusted by the set value in rotation speed setting mode **[P:707]**. The rotation speed switch point varies with the set rotation speed. Underrunning or overrunning the set value in rotation speed setting mode activates and deactivates the status signal **[P:306] SetSpdAtt** respectively.

- Adjust the parameter **[P:707]** to the desired value in %.
- Parameter **[P:026] = 1**
- Read the parameters **[P:308]/[P:397]**.



Permissible rotation speed range of the turbopump

Adjustments in the rotation speed setting mode or in the standby mode are subject to the permissible rotation speed range of the respective turbopump. Underrunning the minimum permissible value causes the warning message **Wrn100**. The electronic drive unit resets the set rotation speed automatically to the next valid value.

- Maintain the permissible rotation speed range of the turbopump (please refer to the technical data in the operating instructions for the respective turbopump).

Standby

Pfeiffer Vacuum recommends standby mode for the turbopump during process and production stops. When standby mode is active, the electronic drive unit reduces the rotation speed of the turbopump. Standby mode is ineffective during rotation speed setting mode. The factory setting for the set value in standby mode is 66.7 % of the nominal rotation speed. Underrunning or overrunning the set speed in standby mode activates or deactivates the status signal **[P:306] SetSpdAtt**.

- Adjust the parameter **[P:717]** to the desired value in %.
- Parameter **[P:026] = 0**
- Parameter **[P:002] = 1**
- Read the parameters **[P:308]/[P:397]**.

Rotation speed set value

The typical nominal rotation speed of a turbopump is factory-set in the electronic drive unit. If the electronic drive unit is replaced or a different pump type is used, the reference set value of the nominal rotation speed must be confirmed. This procedure is part of a redundant safety system for avoiding excess rotation speeds.

HiPace	Nominal rotation speed confirmation [P:777]
10 / 60 / 80	1500 Hz
300	1000 Hz

- Adjust the parameter **[P:777]** according to the pump type.

Once the nominal rotation speed is attained, the pump will run idle unless additional gas loads are entered. Depending on process or application requirements, the nominal rotation speed can be reduced in rotation speed setting mode or standby mode.

Operation mode backing pump

Operation of a connected backing pump via the electronic drive unit depends on the backing pump type.

Operation mode [P:025]	recommended backing pump
"0" continuous operation	all kinds of backing pumps
"1" Intermittend operation	diaphragm pumps only
"2" Delayed switching on	all kinds of backing pumps

- Adjust the parameter **[P:025]** to the desired value.

Continuous operation

With "pumping station on", the electronic drive unit sends a signal to the configured accessory connection to switch on the backing pump. This signal can also be used for controlling a fore-vacuum safety valve.

Intermittend operation (diaphragm pumps only)

Intermittend operation can extend the life expectancy of the membrane of a connected diaphragm pump. Either a diaphragm pump with built-in semiconductor relay or an inter-connected relay box with semiconductor relay is required for intermittend operation. The backing pump is switched on and off in dependence of the turbopump's power consumption. A relation to the supplied fore-vacuum pressure is derived from the power consumption. The switching off and switching on thresholds for the backing pump are adjustable. Fluctuations in the power consumption of idling turbopumps and type-dependent varying fore-vacuum pressures of the backing pumps require the switching thresholds to be set separately for the intermittend mode.

Pfeiffer Vacuum recommends the intermittend mode between 5 and 10 mbar. A pressure gauge and a dosing valve are required to set the switching thresholds.

- Switch on the vacuum system via the function "pumping station" and await the run-up.
- Generate a fore-vacuum pressure of 10 mbar by gas inlet via dosing valve.
- Read and note the parameter **[P:316]**.
- Adjust the switch on threshold backing pump via parameter **[P:711]** to the determined drive power for a fore-vacuum pressure of 10 mbar.
- Reduce the fore-vacuum pressure to 5 mbar.
- Read and note the parameter **[P:316]**.
- Adjust the switch off threshold backing pump via parameter **[P:710]** to the determined drive power for a fore-vacuum pressure of 5 mbar.

Delayed switching on

Switching on the turbopump and the backing pump at the same time can result in unwanted gas flows. Depending on process or application requirements, the backing pump can be switched on with a delay. The switch-on delay depends on the rotation speed of the turbopump and is fixed in the electronic drive unit at 6 Hz.

The switch-on delay signal can also be used for switching a fore-vacuum safety valve.

Operation with accessories

Depending on the configuration, various accessories can be connected to the turbopump and controlled via parameter of the electronic drive unit.

Heating

- Switch on or off the heating via parameter **[P:001]**.

The activation of a connected casing heating depends on rotation speed switch point 1 (factory setting: $80 \% \times f_{\text{Nominal}}$).

Fan

Two options in the connection configuration enable continuous or temperature controlled operation of a connected air cooling unit (see p. 17, chap. 6.3). Threshold values are type-specific and are anchored in the electronic drive unit.

Sealing gas valve

- Switch on or off a sealing gas valve which is connected to a pre-configured output via parameter **[P:050]**.

Vent modes

The turbopump can be vented only after the function "pumping station" has been switched off. Signals are sent to configured outputs with a fixed delay of 6 s. There are three options for operation with a venting valve connected.

- Enable venting via parameter **[P:012]**.
- Select the venting mode via parameter **[P:030]**.

Delayed venting

Start and venting time after "pumping station off" are configurable and depend on the rotation speed of the turbopump.

- Parameter **[P:030] = 0**
- Adjust the venting rotation speed in % of the nominal rotation speed via parameter **[P:720]**.
- Adjust the venting time in s via parameter **[P:721]**.

If the venting rotation speed is underrun, the venting valve will open for the set venting time. In the event of a power failure, venting will occur if the set venting rotation speed is underrun. In this case, the venting period depends on the residual energy delivered by the moving rotor. When power is restored, the venting process is interrupted.

No venting

No venting is performed during this operation mode.

- Parameter **[P:030] = 1**

Direct venting

Start and venting time are not configurable. Venting starts with a delay of 6 s after "pumping station off". When the function "pumping station" is switched on renewed, the venting valve closes automatically. In the event of a power failure, venting will occur if an anchored type-specific rotation speed is underrun. When power is restored, the venting process is interrupted.

- Parameter **[P:030] = 2**

Monitoring the thermal load

If threshold values are overrun, output signals from temperature sensors allow the pump to be brought to a safe condition. Depending on pump type, temperature threshold values for warnings and error messages are saved fixed in the electronic drive unit. For information purposes, various status queries are prepared in the parameter set.

6.5 Switching on/off the pump

Switching on

The function "pumping station" comprises turbopump operation with control of all connected accessories (e.g. backing pump).

→ Switch on the supply voltage with switch S1 on the power supply.

→ Parameter **[P:023]** = 1 (default)

→ Parameter **[P:010]** = 1

Ongoing (and removed) error messages are reset. After a successfully completed self-test, the electronic drive unit sets the turbopump motor and all connected accessories into operation depending on their configuration.

When the pumping station is activated, the motor of the turbopump can be switched off and on via the function **[P:023]**.

Switching off

→ Parameter **[P:010]** = 0



The electronic drive unit switches off the turbopump and activates preset accessory options (e.g. venting, backing pump).


→ Wait for the complete standstill of the pump.

→ Cut off the supply voltage with switch S1 on the power supply.

7 Pfeiffer Vacuum Protocol for "RS-485"

7.1 Telegram frame

The telegram frame of the Pfeiffer Vacuum protocol contains only ASCII code characters [32; 127], the exception being the end character of the message C_R . Basically, a master  (e.g. a PC) sends a telegram, which is answered by a slave  (e.g. electronic drive unit or transmitter).

a2	a1	a0	*	0	n2	n1	n0	l1	l0	dn	...	d0	c2	c1	c0	C _R
a2 - a0		Unit address for slave  <ul style="list-style-type: none">– Individual address of the unit ["001";"255"]– Group address "9xx" for all identical units (no response)– global address "000" for all units on the bus (no response)														
*		Action (see p. 26, chap. 7.2)														
n2 - n0		Pfeiffer Vacuum parameter numbers														
l1 - l0		Data length dn ... d0														
dn - d0		Data in data type concerned (see p. 27, chap. 7.3)														
c2 - c0		Checksum (sum of ASCII values of cells a2 to d0) modulo 256														
C _R		carriage return (ASCII 13)														

7.2 Telegrams

Data request  \Rightarrow ?

a2	a1	a0	0	0	n2	n1	n0	0	2	=	?	c2	c1	c0	C_R
----	----	----	---	---	----	----	----	---	---	---	---	----	----	----	-------

Control command  \Rightarrow !

a2	a1	a0	1	0	n2	n1	n0	l1	l0	dn	...	d0	c2	c1	c0	C_R
----	----	----	---	---	----	----	----	----	----	----	-----	----	----	----	----	-------

Data response / control command understood  \Rightarrow ✓

a2	a1	a0	1	0	n2	n1	n0	l1	l0	dn	...	d0	c2	c1	c0	C_R
----	----	----	---	---	----	----	----	----	----	----	-----	----	----	----	----	-------

Error message  \Rightarrow ✖



a2	a1	a0	1	0	n2	n1	n0	0	6	N	O	_	D	E	F	c2	c1	c0	C_R
										_	R	A	N	G	E				
										_	L	O	G	I	C				

"NO_DEF"	The parameter n2 - n0 does not exist
"_RANGE"	Data dn - d0 are outside the permitted range
"_LOGIC"	Logic access violation

Example 1



Data request

Actual rotation speed (parameter [P:309], device address slave: "123")

 \Rightarrow  ?	1	2	3	0	0	3	0	9	0	2	=	?	1	1	2	C_R
ASCII	49	50	51	48	48	51	48	57	48	50	61	63	49	49	50	13

Data request: 633 Hz

Actual rotation speed (parameter [P:309], device address slave: "123")

 \Rightarrow  ✓	1	2	3	1	0	3	0	9	0	6	0	0	0	6	3	3	0	3	7	C_R
ASCII	49	50	51	49	48	51	48	57	48	54	48	48	48	54	51	51	48	51	55	13

Example 2**Control command**Switch on pumping station (parameter **[P:010]**, device address slave: "042")

☐⇒○!	0	4	2	1	0	0	1	0	0	6	1	1	1	1	1	1	0	2	0	C _R
ASCII	48	52	50	49	48	48	49	48	48	54	49	49	49	49	49	49	48	50	48	13

Control command understoodSwitch on pumping station (parameter **[P:010]**, device address slave: "042")

☐⇒○!	0	4	2	1	0	0	1	0	0	6	1	1	1	1	1	1	0	2	0	C _R
ASCII	48	52	50	49	48	48	49	48	48	54	49	49	49	49	49	49	48	50	48	13

7.3 Applied data types

Data type	Description	Size I1 - I0	Example
0	False / true	06	000000 / 111111
1	Positive integer number	06	000000 to 999999
2	Positive fixed comma number	06	001571 equal to 15,71
4	Symbol chain	06	TC_400
7	Positive integer number	03	000 to 999
11	Symbol chain	16	Breze Bier&Wurst

8 Malfunctions

8.1 General

Turbopump and electronic drive unit malfunctions always result in a warning or error message. In both cases, the electronic drive unit outputs an error code. Operating messages are generally displayed via the LEDs on the electronic drive unit. If an error occurs, the turbopump and connected devices will be switched off. The selected venting mode will be triggered after the preset delay.



WARNING

Automatic start-up after power failure or malfunction acknowledgement

The function "pumping station" of the electronic drive unit remains active after power failure or errors that lead to shut down the pump or the system. The turbopump runs up automatically after power is restored or malfunction acknowledgement.

- Switch off the function "pumping station" if necessary.
- Provide safety measures against interference in the high vacuum flange while the turbopump is running.

8.2 Operating mode display via LED

LEDs in the front panel of the electronic drive unit show basic operating conditions of the turbopump. A differentiated malfunction and warning display is possible only for operation with DCU or HPU.

LED	Symbol	Steady OFF	Flashing (1/12 s active)	Blinking (1/2 s active)	Steady ON
Green	I	insufficient power supply	Pumping station "OFF" Rotation speed $\leq 1\text{Hz}$	Pumping station "OFF" Rotation speed $> 1\text{Hz}$	Pumping station "ON"
Yellow		no warning			Warning
Red		no malfunction			Malfunction

8.3 Error codes

Error code	Problem	Possible cause	Remedy
Err001	Excess rotation speed		⇒ Contact Pfeiffer Vacuum Service ⇒ Reset at rotation speed $f = 0$ only
Err002	Overvoltage	– Wrong mains pack used	⇒ Check type of mains pack ⇒ Check mains pack voltage
Err006	Run-up time error	– Run-up time too short – Gas flow in the vacuum chamber caused by leakage or open valves – Rotation speed switchpoint is underrun after run-up time is expired	⇒ Adjust run-up time to process ⇒ Check the vacuum chamber for leaks or closed valves ⇒ Adjust rotation speed switch point
Err007	Operating fluid deficiency	– Operating fluid deficiency	⇒ Check operating fluid ⇒ Reset at rotation speed $f = 0$ only
Err008	Connection electronic drive unit - pump faulty	– Connection to the pump is faulty	⇒ Check the connection ⇒ Reset at rotation speed $f = 0$ only
Err010	Internal device fault		⇒ Contact Pfeiffer Vacuum Service ⇒ Reset at rotation speed $f = 0$ only
Err021	Electronic drive unit does not recognize pump		⇒ Contact Pfeiffer Vacuum Service ⇒ Reset at rotation speed $f = 0$ only
Err043	Internal configuration fault		⇒ Contact Pfeiffer Vacuum Service
Err044	Excess temperature electronic	– Cooling deficient	⇒ Optimize cooling ⇒ Check the ambient conditions

Error code	Problem	Possible cause	Remedy
Err045	Excess temperature motor	– Cooling deficient	⇒ Optimize cooling ⇒ Check the ambient conditions
Err046	Internal initialization fault		⇒ Contact Pfeiffer Vacuum Service
Err091	Internal device fault		⇒ Contact Pfeiffer Vacuum Service
Err092	Unknown connection panel		⇒ Contact Pfeiffer Vacuum Service
Err093	Temperature analysis motor faulty		⇒ Contact Pfeiffer Vacuum Service
Err094	Temperature analysis electronic faulty		⇒ Contact Pfeiffer Vacuum Service
Err098	Internal communication fault		⇒ Contact Pfeiffer Vacuum Service
Err107	Collective fault power stage		⇒ Contact Pfeiffer Vacuum Service ⇒ Reset at rotation speed $f = 0$ only
Err108	Rotation speed measurement faulty		⇒ Contact Pfeiffer Vacuum Service ⇒ Reset at rotation speed $f = 0$ only
Err109	Firmware not confirmed		⇒ Contact Pfeiffer Vacuum Service
Err110	Operating fluid analysis faulty		⇒ Contact Pfeiffer Vacuum Service ⇒ Reset at rotation speed $f = 0$ only
Err111	Communication fault operating fluid pump		⇒ Contact Pfeiffer Vacuum Service ⇒ Reset at rotation speed $f = 0$ only
Err112	Collective fault operating fluid fault		⇒ Contact Pfeiffer Vacuum Service ⇒ Reset at rotation speed $f = 0$ only
Err113	Rotor temperature invalid	– Measurement not calibrated	⇒ Contact Pfeiffer Vacuum Service
Err114	Temperature analysis power stage faulty		⇒ Contact Pfeiffer Vacuum Service
Err117	Excess temperature pump bottom part	– Cooling deficient	⇒ Optimize cooling ⇒ Check the ambient conditions
Err118	Excess temperature power stage	– Cooling deficient	⇒ Optimize cooling ⇒ Check the ambient conditions
Err119	Excess temperature bearing	– Cooling deficient	⇒ Optimize cooling ⇒ Check the ambient conditions
Err143	Excess temperature operating fluid pump	– Cooling deficient	⇒ Optimize cooling ⇒ Check the ambient conditions ⇒ Reset at rotation speed $f = 0$ only
Err777	Nominal rotation speed not confirmed	– Nominal rotation speed not confirmed after replacement of the electronic drive unit	⇒ Confirm the nominal rotation speed via [P:777] ⇒ Reset at rotation speed $f = 0$ only
Wrn001	TMS heating time elapsed	– internal heating-up timer elapsed	⇒ Check the ambient conditions
Wrn003	TMS heating circuit sensor	– TMS temperature not in the permissible range between +5 °C and 85 °C	⇒ Check the ambient conditions ⇒ Contact Pfeiffer Vacuum Service
Wrn007	Low voltage / mains power failure	– Mains failure	⇒ Check mains supply
Wrn018	Remote priority conflict	– Pumping station is switched on via [P:010] , whereas the E74-input "start/stop" is off (opened)	⇒ Switch on the pumping station via E74 ⇒ Switch off [P:010]
Wrn045	High temperature motor	– Cooling deficient	⇒ Optimize cooling ⇒ Check the ambient conditions
Wrn076	High temperature electronic	– Cooling deficient	⇒ Optimize cooling ⇒ Check the ambient conditions
Wrn097	Pump information invalid	– Pump data faulty	⇒ Reset for default values
Wrn098	Pump information incomplete	– Connection to the pump is faulty	⇒ Contact Pfeiffer Vacuum Service
Wrn100	Rotation speed raised to minimum value	– Permissible adjustments for the rotation speed setting mode or standby are incorrect	⇒ Check [P:707] or [P:717] ⇒ Find the valid rotation speed range in the technical data of the turbopump
Wrn113	Rotor temperature inaccurate	– Measurement not calibrated	⇒ Contact Pfeiffer Vacuum Service
Wrn115	Temperature analysis pump bottom part faulty		⇒ Contact Pfeiffer Vacuum Service
Wrn116	Temperature analysis bearing faulty		⇒ Contact Pfeiffer Vacuum Service
Wrn117	High temperature pump bottom part	– Cooling deficient	⇒ Optimize cooling ⇒ Check the ambient conditions
Wrn118	High temperature power stage	– Cooling deficient	⇒ Optimize cooling ⇒ Check the ambient conditions
Wrn119	High temperature bearing	– Cooling deficient	⇒ Optimize cooling ⇒ Check the ambient conditions
Wrn143	High temperature operating fluid pump	– Cooling deficient	⇒ Optimize cooling ⇒ Check the ambient conditions
Wrn168	High deceleration	– Rate of pressure rise too high; Venting rate to high	⇒ Check and optimize the venting rate (pump specific)



Declaration of conformity

according to the EC directive:

- **Electromagnetic Compatibility 2004/108/EC**
- **Low Voltage 2006/95/EEC**

We hereby certify, that the product specified below is in accordance with the provision of EU Electromagnetic Compatibility Directive **2004/108/EEC** and EU Low Voltage Directive **2006/95/EEC**.

TC 110

Guidelines, harmonised standards and national standards and specifications which have been applied:

DIN EN 61000-3-2 : 2008
DIN EN 61000-3-3 : 2006
DIN EN 61010-1 : 2002
DIN EN 61326-1 : 2006
DIN EN 62061 : 2005
Semi F47-0200
Semi S2-0706

Signatures:

Pfeiffer Vacuum GmbH
Berliner Straße 43
35614 Asslar
Germany

(M. Bender)
Managing Director

(Dr. M. Wiemer)
Managing Director

CE/2011

**Leading. Dependable.
Customer Friendly**

Pfeiffer Vacuum stands for innovative and custom vacuum solutions worldwide. For German engineering art, competent advice and reliable services.

Ever since the invention of the turbopump, we've been setting standards in our industry. And this claim to leadership will continue to drive us in the future.

**You are looking for a
perfect vacuum solution?
Please contact us:**

Pfeiffer Vacuum GmbH
Headquarters • Germany
T +49 6441 802-0
info@pfeiffer-vacuum.de
www.pfeiffer-vacuum.com